




# Toshiba Satellite U925T-S2120 Heat Sink Replacement

Use this guide to replace the heat sink of your Toshiba Satellite U925T-S2120.

Written By: Andrew Honderich

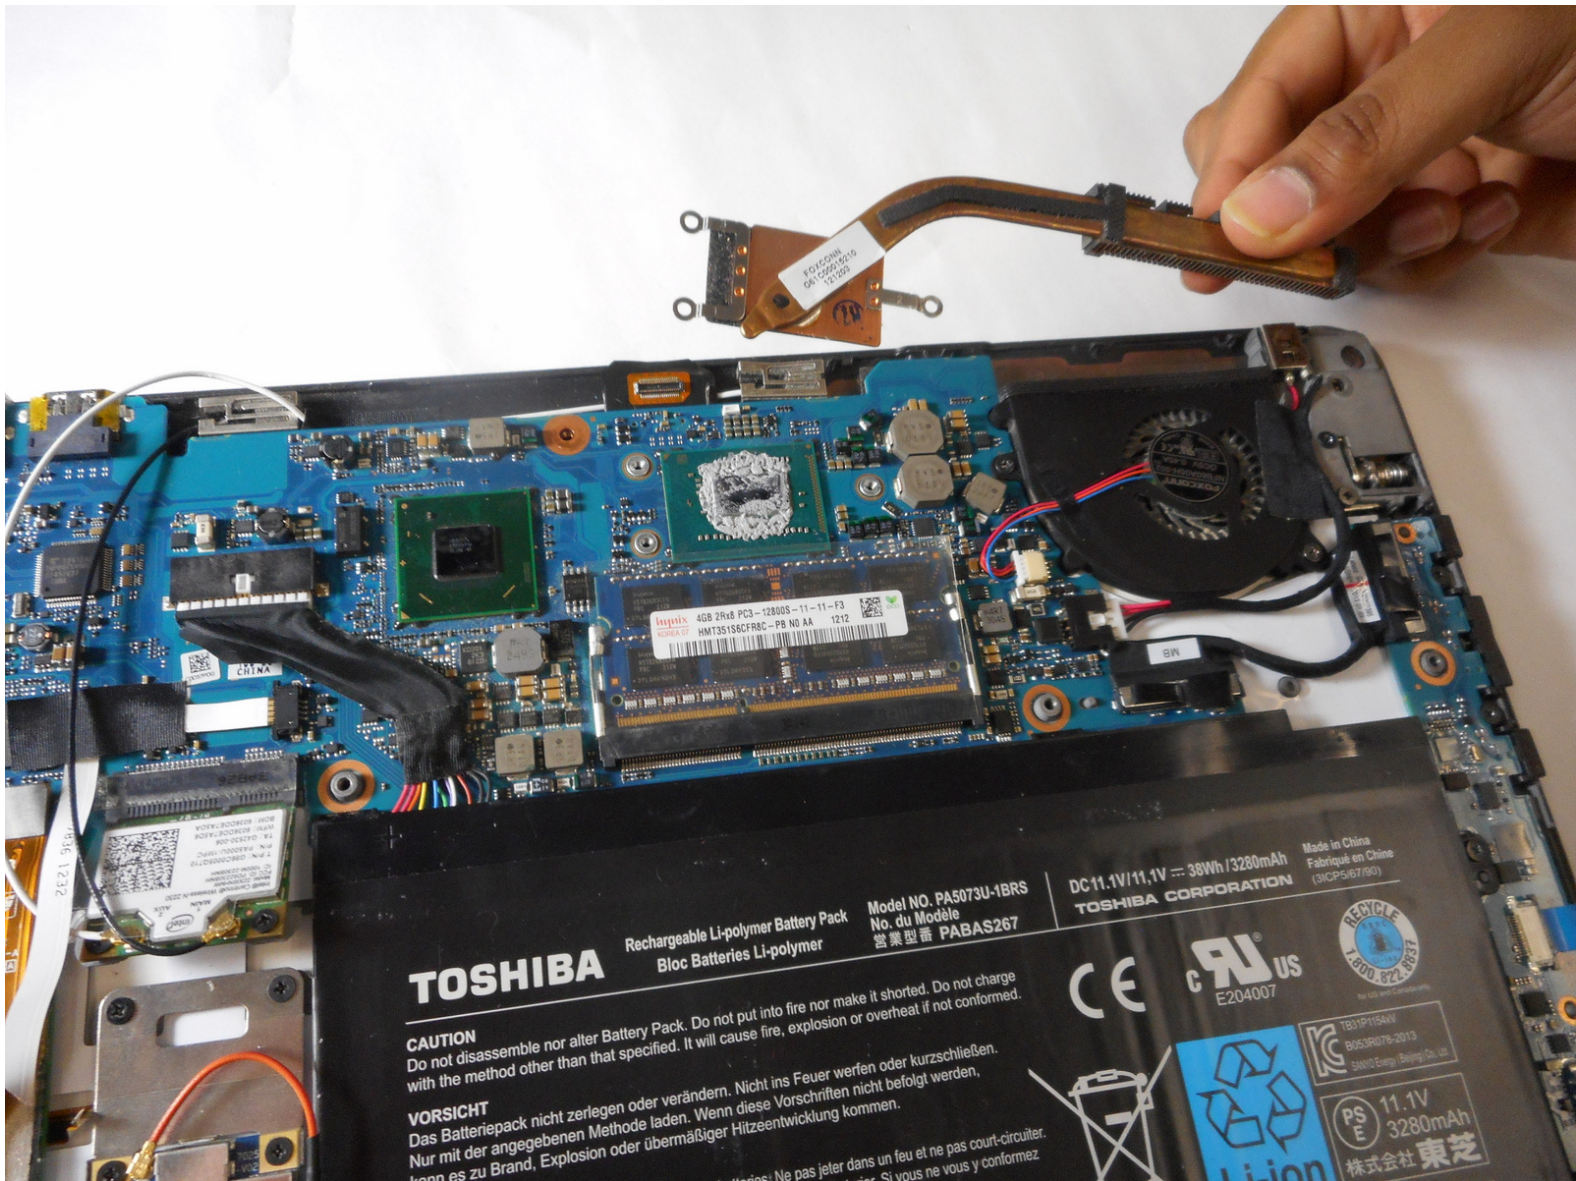

## INTRODUCTION

In this guide you will learn how to remove the heat sink of your Toshiba Satellite U925T-S2120. If your heat sink is clogged or broken, you may need to replace it. Before beginning this guide you should have all required tools that are listed.



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
-



## Step 1 — Heat Sink



- Remove the 9 rubber gripper pads on the back panel of the laptop using tweezers.

## Step 2



- Unscrew nine 5.8 mm screws by turning a PH1 screwdriver clockwise after inserting it into the screw.
- Unscrew two 6.8 mm screws by turning a PH1 screwdriver clockwise after inserting it into the screw.

## Step 3



- Take off the back panel open by sticking the plastic opening tool into the seam of the laptop, and pushing the opening tool downwards.


## Step 4



- Unscrew three 3.4 mm screws by turning a PH1 screwdriver clockwise after inserting it into each screw.



## Step 5

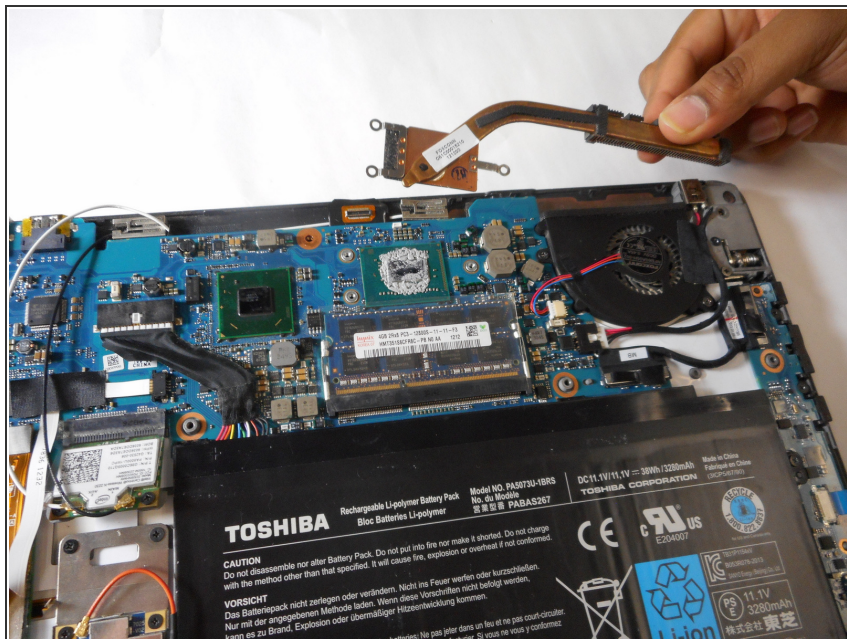

- Lift and remove the heat sink by pinching it with your thumb and pointer fingers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 11:42:21 PM.